

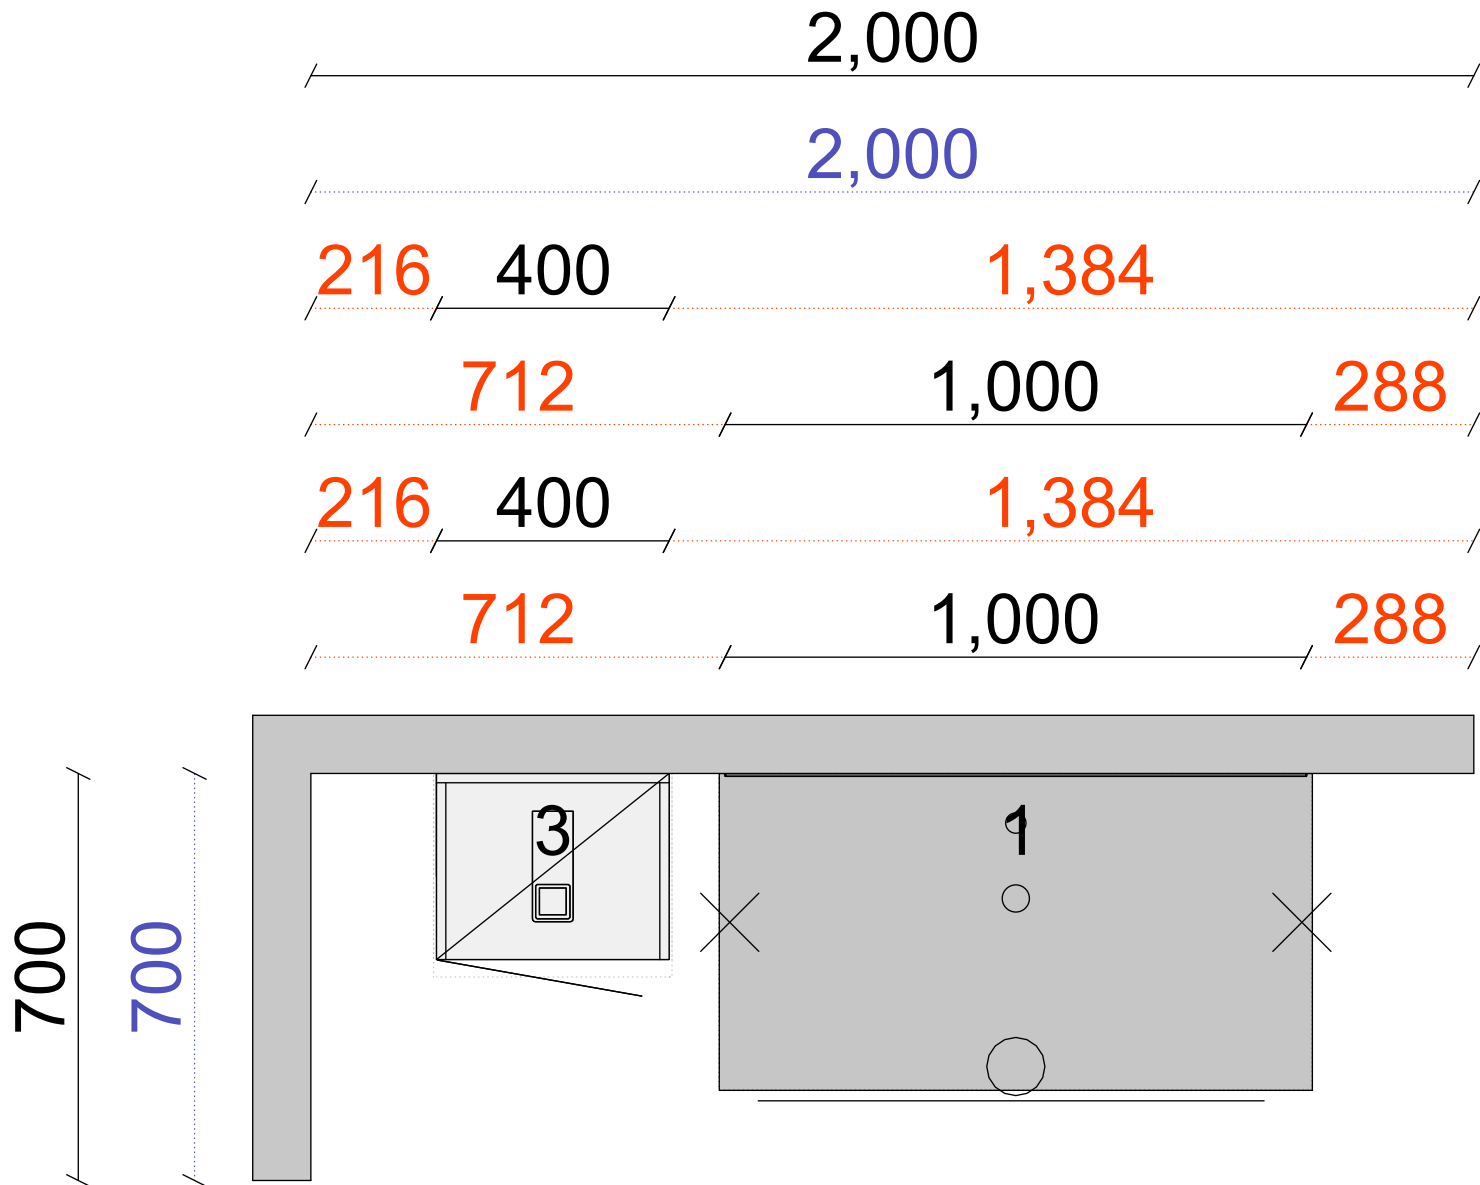


Image may include white goods, styling and other products, which may be available for you to purchase at an additional cost.

✕= Coverside   ✕= End panel   ○= Metal bar   ◎= Spot   △= Dishwasher front